


SAHARA Highway Pegs

Designed for select
BMW® R1200RT, R1200RS, and R1200GS Motorcycles

Installation Instructions

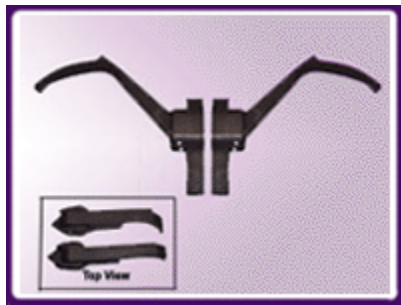

<i>SAHARA-Peg Parts List</i>	
<i>Qty.</i>	<i>Description</i>
2	SAHARA-Pegs
2	Mounting Brackets
8	7/8" Stainless Steel Bolts
1	3/16" Hex Key (Allen Wrench)

CVM Touring Accessories
www.cvmtouring.com

© COPYRIGHT 2005 CVM TOURING ACCESSORIES ALL RIGHTS RESERVED - All pictures, information, technical specifications, technical designs, and product names are (c) Copyright or Trademark (tm) protected. All Trademarks are property of the respective companies.

••• SAHARA-Pegs are intended for show use only. •••

Install the SAHARA-Peg.

1. Prior to installation, turn key to off position.
2. Remove the spark plug/ignition coil cover from valve cover.
3. Select the correct SAHARA Peg for each side.
When open, the top of each peg will have a machine cut tread.
4. Place the SAHARA Peg into the valve cover in place of the plastic spark plug/ignition coil cover.
5. Slide the SAHARA Peg mounting bracket into the valve cover.
Bracket and peg will not be touching.
6. Using four bolts, attach mounting bracket to the SAHARA Peg.
Thread and tighten bolts evenly to ensure proper peg fit.
7. Repeat for the opposite side.

Maintenance.

1. Periodically check the tightness of the mounting bolts.
The peg must be firmly mounted to the valve cover.
2. SAHARA-Pegs should be washed regularly to remove any abrasive debris.
3. Apply grease to the pivot and detent mechanism regularly. **FAILURE TO DO SO WILL VOID ALL PRODUCT WARRANTIES.**

Be safe! Open or close the SAHARA-Pegs only when the engine is not running. Never adjust accessories when in traffic or when in motion.

These are NOT Full weight-bearing Foot Pegs.